



16 channels selected Flash Remote Trigger Wireless control
Support with Umbrella reflector

Installation of the device:

1. Insert the transmitter to the hot shoe of the camera and screw the knob tightly.
2. Attach the flash unit to the hot shoe mount of receiver
3. Set a same channel on both transmitter and receiver
4. Insert the umbrella reflector into the hole of receiver if you need

Specifications:

Power: 23A (Transmitter), CR2 (Receiver)
Range: >30M (Transmitter), >30M (Receiver)
Channel: 16
Operation Frequency: 433MHz
Sync speed: 1/200 sec.

